

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted into any part of the body.




Battery instructions and details

This watch contains a 1.55v SR626SW replaceable battery. This battery is **NOT** rechargeable.

SR6262W Battery Specifications

- Diameter: 6.8mm
- Height: 2.6mm
- Voltage: 1.55V
- Capacity: 24mAh – 28mAh

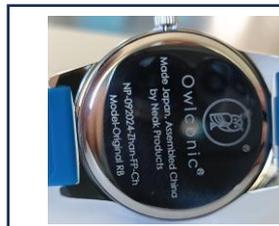

The battery/back cover has been pressed on in our factory and requires a tool to remove it.

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- The compatible battery type SR626SW
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 50°C/122°F or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

WE HIGHLY recommend replacement batteries are done by a qualified Jeweller or Watchmaker.



This icon advised that this product contains a coin/button battery.

Owlconic Teaching Watch Time Setting Instructions



Remove plastic battery saver peg from behind watch crown.



Plastic battery saver peg removed



Make sure the watch crown is pulled out away from the watch case.

Rotate the crown until the correct time is set on the watch then push the crown back in towards the watch case.



With the crown now pushed all the way in the watch should be working, you should see the second hand moving around the watch face.

Care Instructions

Use only a clean dry cloth to wipe over the watch if necessary.

Your watch is Water Resistant ONLY it's not Waterproof.

It IS Resistant to rain and water splashes.

It IS NOT suitable for swimming, showering or immersion in water.

A Jeweller or Watch Repairer must be used when replacing a battery.

Remember to register your warranty at www.owlconic.com